

TV Unit Instructions



To Turn on System

Press “power” button on the remote while it is pointed at the television



To Play DVD or VHS Tape

Insert DVD or VHS tape into the player. VHS tapes on the left and DVDs on the right. Use the open/close button on player or remote to insert DVD.



To Play DVD or VHS Tape continued


Press Input Select button to switch between DVD/VHS/Television



To Access Apps

Press middle “V” button on remote

Press middle “V” button twice to see all apps

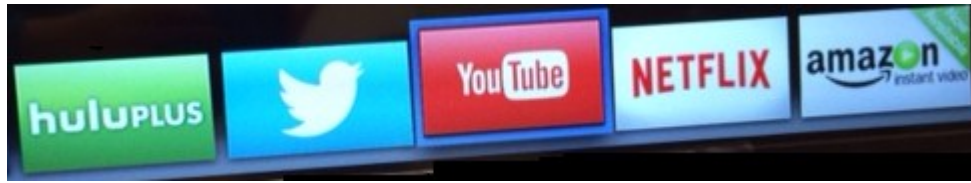

To Use App

To select an App, move arrows on remote over the app, press “OK” button, and sign in using your own account information



To Exit Out of App

Press “EXIT” button on remote



To Turn Off System

Press “power” button on the remote while it is pointed at the television